

VIV-AV-750
Instruction Manual



Vivitar®
Aqua Series

7x50 Binoculars

Limited One Year Warranty

Vivitar warrants this quality product to be free of defects in material and workmanship for a period of one year from the date of purchase. During the period, Vivitar will repair or replace the product at no charge for parts or labor.

TIME PERIOD OF THIS WARRANTY

The time period of this warranty starts from the date of the original purchase and expires on the first anniversary date of purchase.

WHAT IS NOT COVERED BY THIS WARRANTY

No express or implied warranty is made for any defects in this product which result from accident, abuse, misuse, failure to operate the product in accordance with relevant instructions, neglect, immersion in or exposure to chemicals or liquids, extremes of climate, fungus, excessive wear and tear/cosmetic damage and defects resulting from other extraneous causes such as unauthorised disassembly, repair or modification.

This warranty shall not extend to any incidental or consequential damages arising from the purchase, use or inability to use this product even if Vivitar has been advised of such damages. The laws of some countries and some States thereof do not allow the limitation of incidental or consequential damages, so the above limitation or exclusion may apply to you.

WHAT TO DO WHEN SERVICE IS NEEDED

STEP 1. Package the product and relevant accessories carefully, using ample padding materials and a sturdy mailing container to prevent damage in transit.

STEP 2. Include in package:

- a) Evidence of date and place of original purchase (for example, a copy of your sales receipt).
- b) Detailed description of your problem.
- c) When possible, a sample evidencing the problem.

STEP 3. Return item (insured) to: (in the U.S.):

Vivitar
Attn: Technical Support
195 Carter Drive
Edison NJ 08817

(in the U.K.)

Sakar UK
2D Siskin Parkway East
CV3 4PE, UK

When service is complete, the product will be returned to you shipping prepaid. In the event the product is deemed to be not faulty or the defect is a result in wear and tear, Vivitar may levy a handling charge for the return of the product. This warranty gives you specific legal rights. You may also have other rights which vary from country and State to State thereof. For more information visit our website www.vivitar.com

TECHNICAL SUPPORT

For technical support issues please visit our website at www.vivitar.com. You can find manuals, software and FAQ's at the website. Can't find what you are looking for? E-mail us at support@vivitar.com and one of our technical support team members will answer your questions. For phone support in the US please call 1-800-592-9541, in the UK call 0800 917 4831. If you would like to call from anywhere else, please visit www.vivitar.com for your local toll free number.

Included with Your Binoculars

- Carrying Case
- Shoulder Strap
- Cleaning Cloth
- User's Manual with Warranty Information

Your binoculars will be particularly useful while participating in the following activities:



Outdoor Activities



Nature Viewing



Birdwatching



Sporting Events

Specifications

Optical Design: BAK 4 Porro Prism

Diameter: 50mm (1.96 inches)

Magnification: 7x

Angular Field of View : 7.1°

Linear Field of View @ 1000 YDS: 372ft (113.38m)

Exit Pupil Distance: 24mm (0.93 inches)

Exit Pupil Diameter: 5.0mm (0.19 inches)

Minimum Focus Distance: 10m

Dimensions: 200x185x80mm

Optical Coatings: Multi-Coated

Features

- Waterproof
- 7x Magnification
- Reliable Center Wheel Focus Design
- Multicoated Optics for Clear Sharp Views
- Diopter Adjustment for Precise Focusing
- Nitrogen Filled and Sealed

Using Your Binoculars

1. Hold the binoculars close to your face so that the eyepieces line up to your eyes. Use both hands to hold each barrel firmly.
2. Pull the barrels together or apart so that the eyepieces are suitably spaced to account for the distance between your eyes.
3. Set the Diopter Knob to zero.
4. Look through the binoculars and focus on an object of your choosing.
5. Cover the right Objective Lens so that you will be looking through your left eye only.
6. Rotate the Center Focus Knob until the object you are viewing with your left eye looks sharp and clear. At this point the object is in focus.
7. Uncover the right Objective Lens and now cover the left Objective Lens so that you will be looking through your right eye only.
8. Again look at the object of your choice and now rotate the Diopter Knob until the object you see through your right eye is sharp and clear. At this point the object is in focus.
9. Now with a turn of the Center Focus Knob, only, both near and far objects can be brought into focus.



Cleaning and Maintenance

- A. Only wipe with cleaning papers or the included cleaning cloth.
- B Accumulated dust should be blown off with a syringe or blower brush specifically designed for this purpose. To remove fingerprints or smears, shred the end of a lens tissue and roll it to make a swab: dampen it with a lens cleaner especially made for optics and gently wipe the surface without applying too much pressure. If necessary, repeat using a new swab. To clean, start at the center of each lens using a circular motion and working to the edge of each lens for best results.
- C. When your binoculars are not in use, they should be stored in a cool dry place.

Warning

Never attempt to observe the sun through your binoculars. Attempts to do so can cause irreversible eye damage and even blindness.

Vivitar